

# Product Data

## Audio Analyzer — Type 2012

### USES:

- Development and quality control testing of electroacoustic and vibration transducers: loudspeakers, telephones, headphones, microphones, hearing-aids, hydrophones, accelerometers
- Linear and non-linear system analysis
- Propagation path identification
- Acoustical measurements in rooms and vehicles


### FEATURES:

- Transducer workstation with three different measurement modes:
  - TSR — Time Selective Response
  - SSR — Steady State Response
  - FFT — Fast Fourier Transform
- 12" high-resolution colour monitor
- Up to 36 curves can be displayed simultaneously
- Frequency range: 1Hz to 40kHz
- Distortion and noise:  $< -80$  dB re full scale input
- Fast time selective measurement of complex response in both time and frequency domains — up to 20th harmonic

The Type 2012 Audio Analyzer is a powerful instrument for transducer measurements and system analysis. It features a colour screen, built-in  $3\frac{1}{2}$ " floppy disk drive, IEEE-488 and RS-232-C interfaces, three measurement modes and an Auto Sequence facility. The Time Selective Response mode enables extremely fast, accurate, swept sine measurements of the free-field response of a transducer in an ordinary room up to the 20th harmonic. The Steady State Response mode enables stepped sine measurements of Harmonic, Difference Frequency and Intermodulation distortion. The 2012 also incorporates a 1600 line single-channel FFT for spectrum measurements.

Type 2012 has numerous post-processing capabilities: windowing, block arithmetic, addition of poles and zeros, square and square root, absolute value, and editing of response data. Applications include development and quality control testing of loudspeakers, telephones, microphones and other electroacoustic and vibration transducers.

- Automated measurements of individual Harmonic, Intermodulation, and Difference Frequency distortion components
- 1600 line FFT spectrum
- User-definable Auto Sequences
- Extensive post-processing facilities: +, -,  $\times$ , /,  $1/x$ ,  $x^2$ ,  $\sqrt{x}$ ,  $|x|$ , poles, zeros, windowing, editing, smoothing
- On-screen help facility — in English, French or German
- Input autoranging
- Preamplifier (microphone) and balanced or single-ended direct inputs
- Two separate built-in sine generators
- Built-in  $3\frac{1}{2}$ ", 1.44Mbyte, PC/MS-DOS compatible floppy disk drive for storage of data, setups, and Auto Sequences
- Hard copy facility for plotters and printers, both colour and monochrome, direct or via disk
- Flexible, user-friendly digital interfaces (IEEE-488/IEC 625-1 and RS-232-C)
- IEEE-488 bus controller function

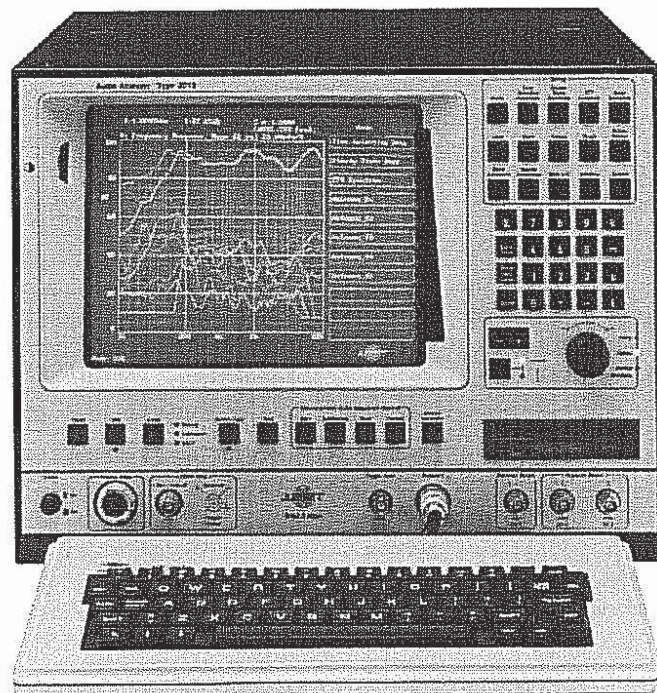



## Introduction

Audio Analyzer Type 2012 offers three powerful measurement techniques in one instrument. Time Selective Response (TSR), Steady State Response (SSR) and FFT Spectrum (FFT) techniques combined with full complex processing, ensure that Type 2012 will solve almost any electroacoustic measurement problem.

### TSR Mode

The TSR mode enables "free-field" measurements without an anechoic chamber, by rejecting the reflections from an ordinary listening room. Type 2012 incorporates a technique that allows a useful combination of speed, accuracy and signal/noise ratio for such measurements.

### SSR Mode

The SSR mode offers comprehensive distortion measurement facilities: Harmonic, Intermodulation and Difference Frequency distortion modes. For band-limited objects, such as electroacoustic transducers, non-linearities cannot be evaluated simply by measuring Harmonic, Intermodulation or Difference Frequency distortion at a few frequencies only. The inclusion of all three distortion modes means that measurements can be made beyond the upper frequency limit of a test object. This is possible because the distortion components will remain inside the working frequency range of the object.

### FFT Mode

The FFT Spectrum mode has been specially developed for optimum analysis of transient signals in the time or frequency domains.

### Description

Type 2012 features a 12" high-resolution colour screen. 16 different colours can be selected from a palette of 4096 colours. Setting up the screen format for simultaneous presentation of up to 36 curves on one or two graph fields is very simple with Type 2012, and multiple curves are easily presented by using different colours.

The 2012 is simple to operate. The "soft key" system significantly reduces the number of keys. The keys are organized to give a good overview of the various functions, and logical menus provide a guide for setting up the analyzer. The soft keys are positioned along the right-hand edge of the colour monitor.

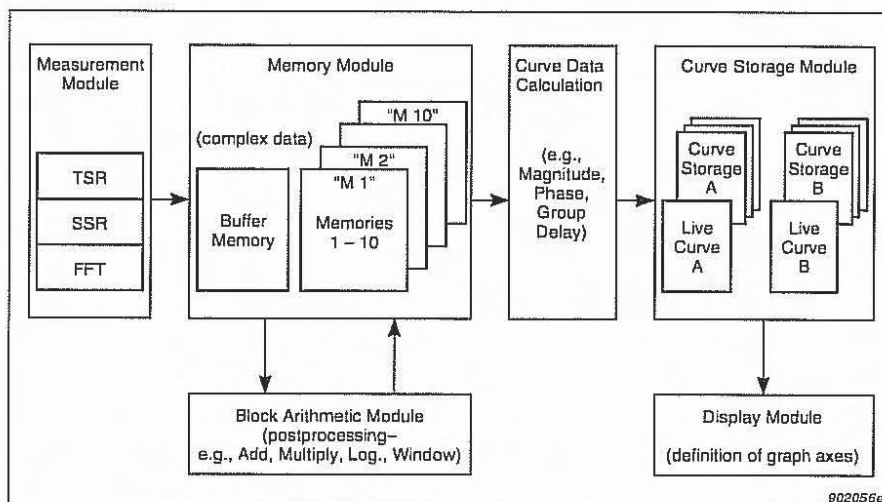


Fig.1 Flow-chart showing the basic data flow in Type 2012. Data from the measurement module are stored as complex numbers in the buffer memory or one of the ten result memories. Graph functions can be calculated and displayed after a measurement is performed

A command-oriented Auto Sequence facility makes it simple to set up the 2012 to perform a specific task. Auto Sequences are edited in a special menu, and are basically a sequence of setup changes or control commands which are executed in the same order as they are set up. The Auto Sequence facility allows you to tailor the operation of the 2012 to a specific application. Five Auto Sequences, each containing up to 100 lines, can be stored in the 2012. Auto Sequences can also be saved or read from a disk.

Measurement data are always stored as complex frequency functions in the measurement buffer or one of the ten result memories — "M1" to "M10". The data in each of these memories can then be processed further, as complex numbers, using the Block Arithmetic facility. Fig.1 gives an overview of the data flow inside Type 2012.

Measurement results obtained in TSR or SSR mode are calculated as transfer functions, whereas measurement results obtained in FFT mode are calculated as amplitude-density spectra.

The input and output of the analyzer can be calibrated in any desired unit. Once calibrated, the 2012 level settings refer directly to the signal at the terminals of the measurement object. An autorange function exists for setting the optimum input gain.

For most applications the 2012 is a self-contained instrument. It has both direct and microphone inputs and two separate built-in sine signal generators for excitation. The Direct

Input can be used balanced or single ended. The "Preamp. Input" is used for connecting a standard B&K microphone preamplifier and measuring microphone.

Graphic presentation and documentation are set up in the Screen Format menu. This menu has comprehensive facilities for documentation and hard copies of all parameters concerning a measurement can easily be made. Two screen pictures with a total of 36 graphs can be stored simultaneously. The Graph menu is used for setting up the parameters for the frequency and time domain functions. Any desired graph function can be displayed after a measurement has been performed. A set of graph data is calculated based on the parameters in the Graph menu and the measurement data from the measurement buffer or one of the result memories. The flexibility of the graph axis parameters and the possibility for individual graph annotations give great freedom for viewing and documenting the results.

A standard "QWERTY" keyboard is delivered with the 2012. It is used for entering text on graphs and for personal comments on a text page. The keyboard can easily be changed to include German or French characters. The analyzer is supplied with English, German or French program disks (see specifications). This gives the option of selecting English, German or French characters, as well as displaying help pages in the desired language.

The 2012 has extensive on-line help facilities. One status line and



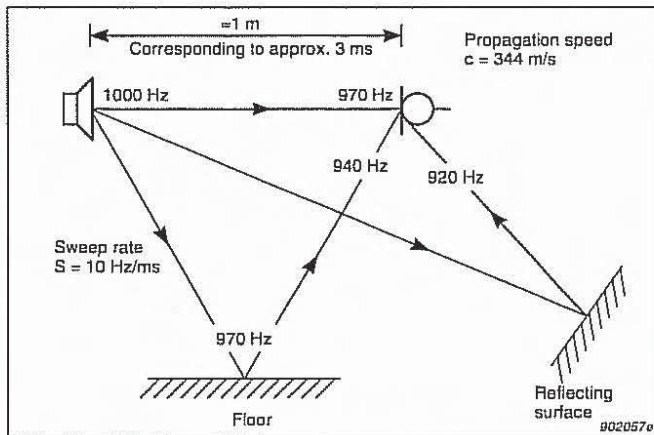


Fig.2 The Time Selective Response mode allows the free-field response of a loudspeaker to be measured in an ordinary room. A linear sweep is used for excitation. Various delays are converted into frequency shifts proportional to the delay and sweep rate  $S$ . The figure shows the instantaneous frequencies at the moment in time when the generator is at 1000Hz

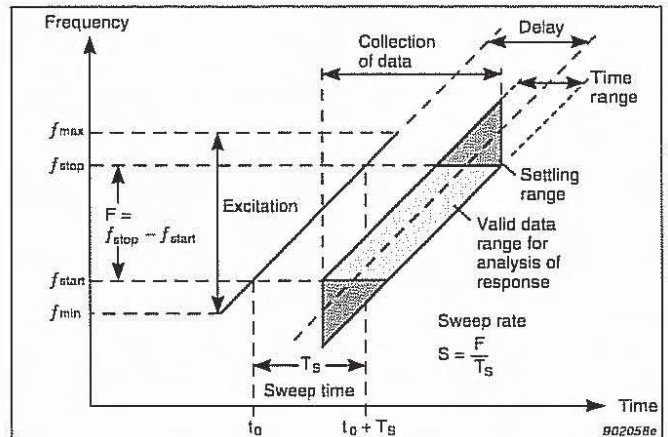


Fig.3 The 2012 measures the fundamental frequency or selected harmonic (up to the 20th), in TSR mode. The light raster area represents the data which are actually used for analysing the response. The sweep range is automatically increased to eliminate "edge effects". The triangular dark raster areas represent the extra data. The width of the data area is given by the Time Range which is equivalent to the length of the time window

one error-message line appear at the bottom of the screen to give immediate help or warning about the button which has just been pushed. A comprehensive full-screen help page can be obtained by pressing "Help" and then pressing the key for which help is required.

## Measurement Modes

A Mode menu is used for selecting either the TSR, SSR or FFT measuring mode, or one of the five Auto Se-

quences. Measurements are always performed in the mode selected in the Mode menu.

Separate measurement and display processors allow the analyzer to be quickly set up for another measurement — even while a measurement is in progress.

### Time Selective Response

The TSR mode employs a technique for measuring a time-selective transfer function using a linear continuous sine sweep with constant or frequency-weighted amplitude. The main advantage of this technique is its

capability of rejecting noise and reflections, even with short measuring times.

One of the main applications of the TSR mode is the simulated measurement of free-field response, for example, in evaluating loudspeakers in a normal reverberant environment, thus avoiding the use of an expensive anechoic chamber. One of the properties of TSR is that the magnitude and phase responses are available in both the time and the frequency domains. Both the frequency and the time domain responses are typically available almost instantaneously.

The driving signal used for TSR is a linear sine sweep, i.e. the instantaneous frequency is linearly related to time. This linear sweep links time and frequency together in such a way that a selection in time — and consequently in space — can be obtained by filtering in the frequency domain, see Fig. 2. An advanced detector algorithm ensures that the response is calculated correctly, independent of the selected sweep time.

The synchronism between the excitation signal and the filter tracking the response provides the 2012 with an inherently good signal/noise ratio. The TSR technique offers the optimal combination of signal/noise ratio and measuring time, for almost any practical measuring situation. The basic parameters which must be considered when setting up a TSR measurement are: Frequency Range, Delay, Time Range, and Sweep Time. The relationship between these parameters is illustrated in Fig. 3. Delay is the time between excitation of

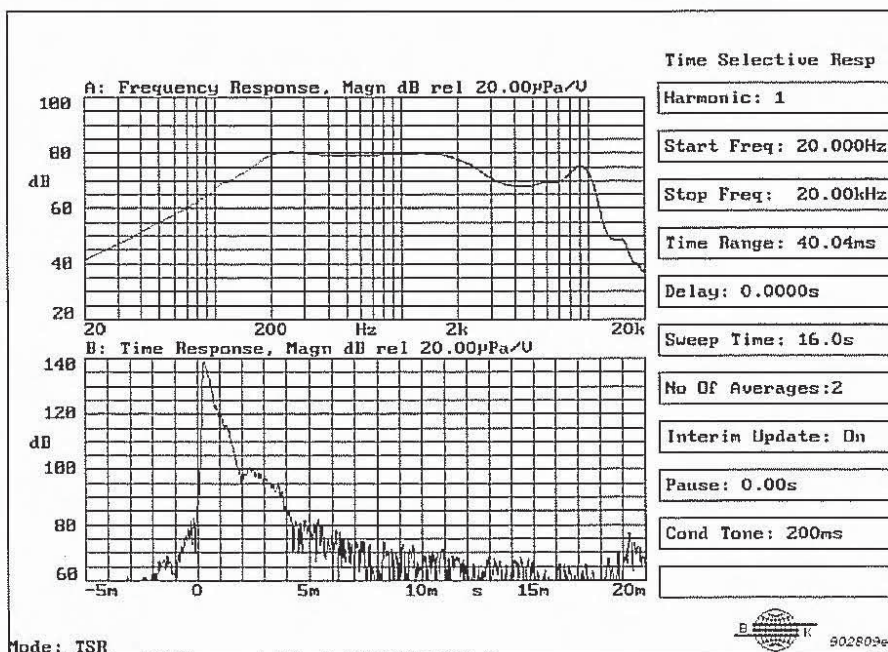


Fig.4 TSR menu with dual graph display. The upper graph shows the frequency response for a small loudspeaker measured at 1m distance. The lower graph shows the time response (magnitude of the impulse response) for the same measurement setup



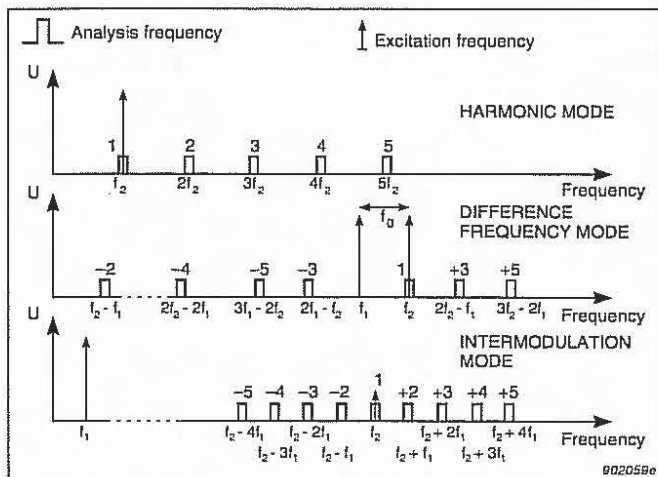


Fig.5 Harmonic distortion, Difference Frequency and Intermodulation distortion can be measured selectively using stepped sine excitation in Steady State Response mode

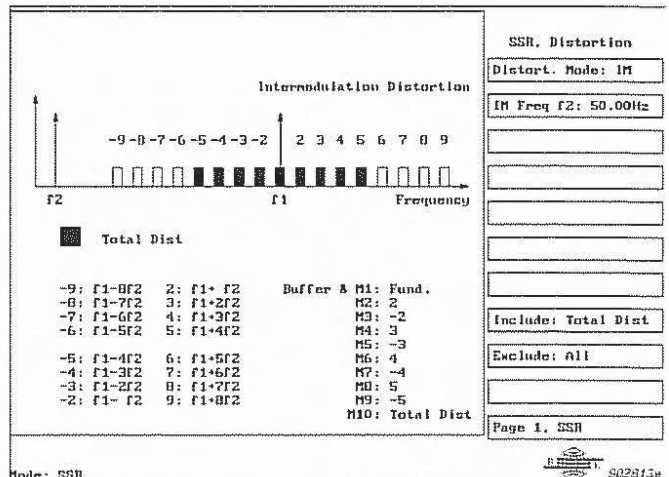


Fig.6 SSR Intermodulation distortion menu and graphical presentation for setting up the parameters for measuring Intermodulation distortion. This menu is set up for measuring the fundamental, the Intermodulation distortion orders 2, -2, 3, -3, 4, -4, 5, -5 and Total Distortion

the measuring object and collection of the measurement data. Time Range is equivalent to the length of the time window for the measurement. Sweep Time is the time it takes to perform a sweep covering the specified frequency range, i.e. the effective measurement time. When performing a measurement, the sweep range entered is automatically increased to keep unavoidable "edge-effects" outside the frequency range of interest (see Fig.3). Choosing a longer sweep time, will improve the signal/noise ratio proportionally. Hence the sweep time should be chosen so that the noise is sufficiently suppressed. Normally this can easily be obtained with sweep times of the order of a few seconds. A number of averages (1 to 1024) can also be specified to improve the signal/noise ratio which only depends on the total effective measurement time.

Measurements can be made for the fundamental or up to the 20th harmonic. A sweep can be made in both directions, depending on the specified start and stop frequencies. The position of the time window can be varied around the measured impulse response to compensate for large propagation times in the measured object. Fig.4 shows the TSR Setup menu with a dual graph display.

### Steady State Response

The SSR mode employs a technique for measuring a steady state transfer function using stepped sine excitation with an adaptive scan algorithm. The adaptive scan algorithm means that the steady state response is

measured to the user-specified accuracy in the minimum possible time.

In general, SSR mode is desirable for measurements at a number of single frequencies. The distribution of the excitation frequencies for an SSR measurement can be linear, logarithmic or user-defined.

A stepped sine signal is used for excitation in SSR mode. The adaptive scan algorithm automatically samples at each frequency until the response has stabilized to within the specified accuracy. In this way the measurement is optimized in the minimum time for a given accuracy.

The SSR mode also incorporates extensive facilities for measuring distortion. Graphical menus make it easy to set up the system to perform Harmonic, Difference Frequency and Intermodulation measurements. Fig.5 illustrates the different distortion modes.

Harmonic distortion mode can include any harmonic up to the 20th. Total (including fundamental), Total Distortion (not including fundamental) or THD can also be specified in this menu.

Difference Frequency distortion is measured by exciting the system

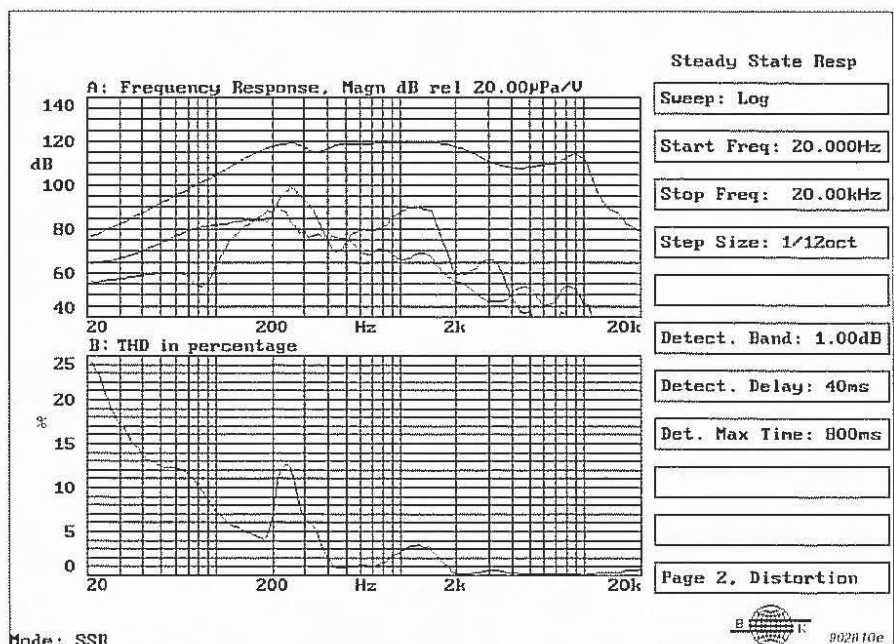


Fig.7 SSR menu with dual graph display. The upper graph shows the near-field frequency response for a mid-range driver, and also includes the 2nd and 3rd harmonics. The lower curve shows the corresponding Total Harmonic Distortion as a percentage



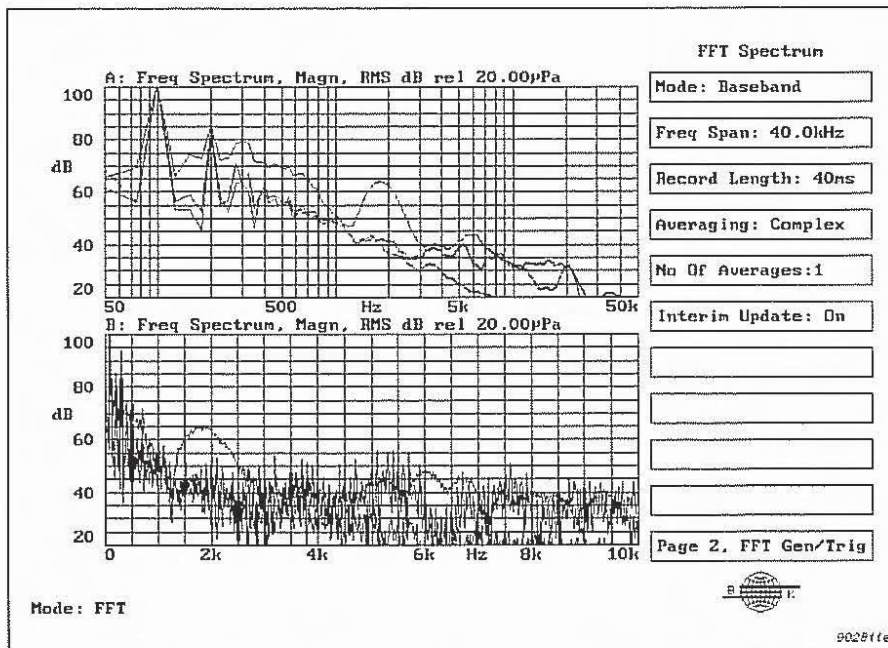


Fig.8 FFT menu with dual graph display. The FFT mode allows baseband measurements as well as measurements in a limited frequency range (Zoom). The upper graph shows a rub, buzz and rattle analysis for a defective loudspeaker driver, using FFT Baseband mode. The lower graph shows the same measurements with the FFT Display set up for 10kHz bandwidth

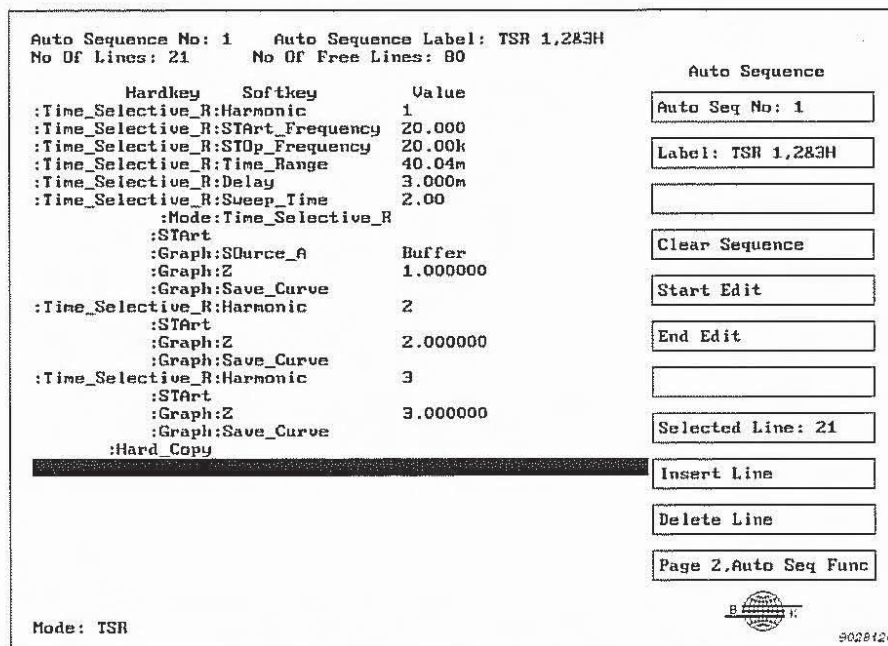


Fig.9 Autosequences are listed using the equivalent IEEE-488 bus commands. This Auto Sequence will perform a TSR measurement of the fundamental and the 2nd and 3rd harmonic distortion components, display the curves on the screen and finally make a hard copy of the screen picture

with two test tones of constant or weighted amplitude,  $f_1$  and  $f_2$ . The two tones are stepped through the frequency range of interest, while keeping a fixed frequency difference between them.

Intermodulation distortion is also measured by using two test tones,  $f_1$  and  $f_2$ , with constant or weighted amplitude.  $f_2$  is kept at a fixed low-frequency,

while  $f_1$  is stepped through the frequency range of interest. One of the main advantages of Intermodulation and Difference Frequency distortion measurements is that they can be used for measurements beyond the upper frequency limit of a system, (since the resulting distortion components remain inside the frequency range of the system). Fig. 6

shows the Setup menu for measuring Intermodulation distortion.

Fig.7 shows the menu for setting up the SSR parameters. Linear, logarithmic or user-defined distribution of excitation frequencies can be selected. Step size can be set to  $1/3$ ,  $1/6$ ,  $1/12$ ,  $1/24$ ,  $1/96$ -octave and Progressive, i.e. starting with the  $1/3$ -octave excitation frequencies, then adding the remaining frequencies to make a  $1/6$ -octave measurement and so on until all the  $1/96$ -octave frequencies have been measured. The optimum filter bandwidth is set automatically.

### Fast Fourier Transform

In FFT Spectrum Mode an FFT algorithm is used for measuring the spectrum of a signal from a measurement object. The test object may be excited from the internal sine generators in Type 2012.

The single-channel FFT mode is suited for the analysis of continuous signals and for transient signals, where the entire signal to be analyzed fits into the analyzer memory. The FFT mode can be advantageous for measuring, e.g., background noise, telephone dialling tones, attack/release times of compressor circuits or for a quick evaluation of nonlinearities in a test setup.

Two basic modes can be selected — Baseband or Zoom. In Baseband mode the 2012 produces an FFT spectrum with a frequency resolution of up to 1600 lines, based on 4096 samples in the time function. In Zoom mode (high-resolution mode) a particular center frequency can be selected, and a bandwidth from 1.56Hz to 1600Hz can be specified to "zoom" in on this frequency (see Fig.8). The resolution in Zoom mode is always 513 lines, based on 1024 time samples. Averaging is used to obtain a statistically reliable result by reducing the effects of random variations. Complex amplitude averaging or Power averaging can be selected. Fig.8 shows the FFT Setup menu where a dual graph display is used to illustrate a Baseband measurement and the Display Zoom facility.

### Auto Sequences

An Auto Sequence is a user-defined sequence of front panel functions. On the screen, it appears as a three-column list, including the hard key label, the soft key label and the parameter value (if any), which together constitute the equivalent IEEE-488 bus commands. A "learn mode" is used to make this list by



simply pushing the desired keys. Any front panel function, including calling another Auto Sequence, can be executed with an Auto Sequence. Fig.9 shows an Auto Sequence which will perform a TSR measurement of the fundamental and the 2nd and 3rd harmonic distortion components, display the curves on the screen and finally make a hard copy of the screen picture. Editing the five Auto Sequences, each containing up to 100 front panel functions, is extremely easy.

The 2012 is supplied with a disk with a number of Auto Sequences which makes up a tutorial guide.

## Processing

### Memory

Type 2012 has a 3Mbyte internal memory with a battery back-up for permanent storage of data. The continuous memory is used for storing the program source, a complete parameter setup, five Auto Sequences, 11 complete result memories, two separate screen pictures (Graph A and Graph B) with up to 36 curves and user-defined text.

The content of the internal memory is used whenever the 2012 is switched on without the program disk in the disk drive. Switching on or resetting the instrument with the program disk in the disk drive will update the main program and reset all data. Changing between English, German or French help pages and characters, is simply a matter of loading the desired version of the program disk.

### Block Arithmetic

The Block Arithmetic menu is used for post-processing operations yielding a complete response function or spectrum as a result. All measurement data are stored as complex numbers, i.e. with real and imaginary parts, allowing full complex processing to be performed. Data in any of the 11 result memories can be post-processed. The result is a new set of data which can be stored in any of the result memories. The list of post-processing operations are:

- Copying data between the 11 result memories.
- Multiplying data with a frequency or a time window (Hanning, Rectangular or Rectangular with Hanning Taper)

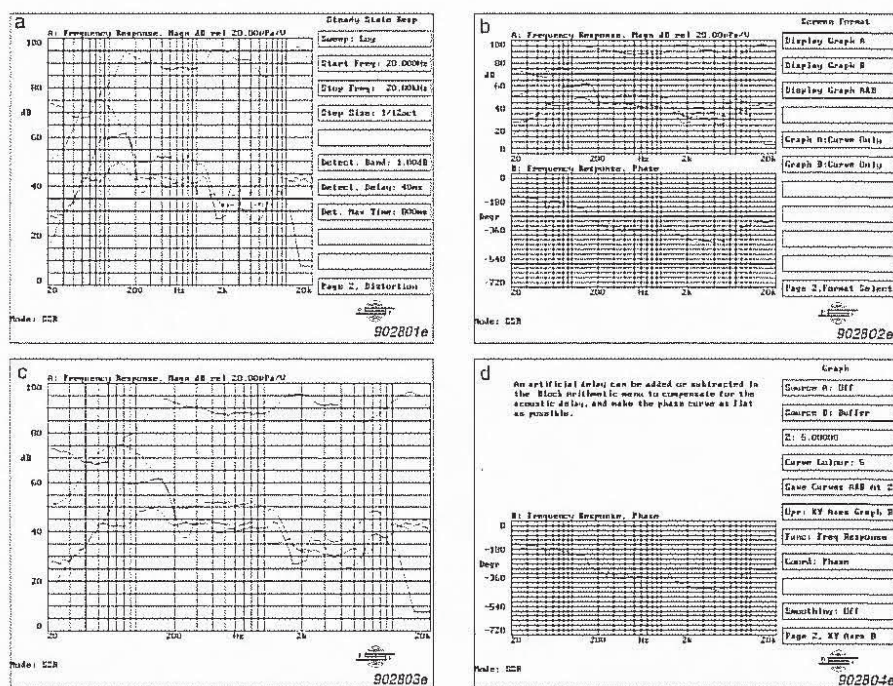


Fig.10 Examples of different screen formats which can be selected in the Screen Format menu.

- a) Graph A format for displaying a single graph area with up to 36 curves
- b) Graph A & B format for displaying a dual graph with Graph A at the top of the screen picture and Graph B at the bottom
- c) Full screen graph (no menu)
- d) Graph and Text page on the same screen picture

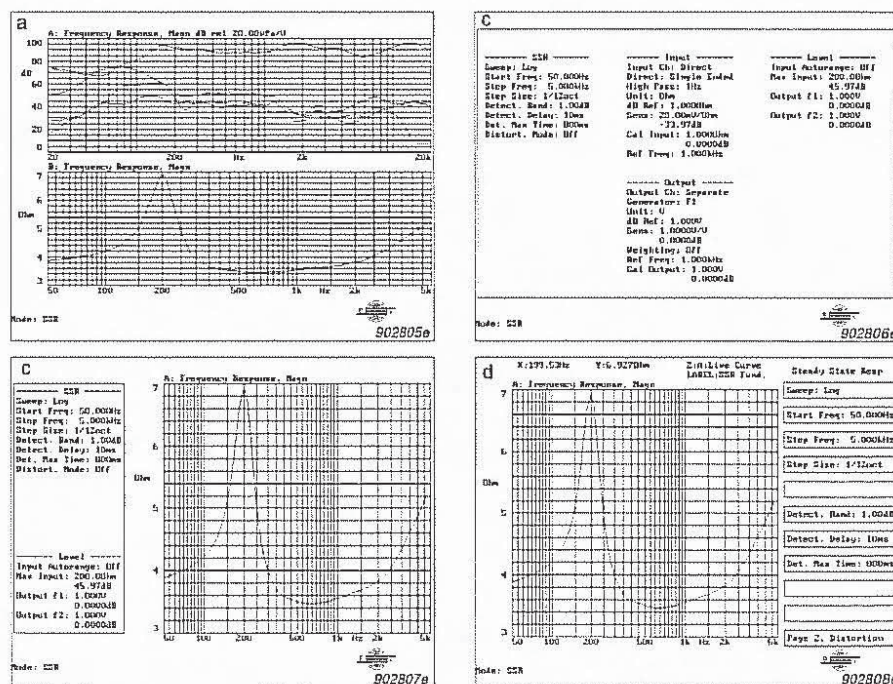


Fig.11 The different screen formats offer the possibility of documenting measurements. When a hard copy is made it is a reproduction of what appears on the screen.

- a) Graph Only format expands the graph field to cover the entire screen (no menu is shown)
- b) Full TSR/SSR/FFT Setup format is used for displaying the parameters from the respective menus together with parameters from the Input, Level and Output menus
- c) Graph and TSR/SSR/FFT Setup format is used for displaying the parameters from the respective menus together with parameters from the Level menu, on the left-hand side of the screen. The graph is shown on the right-hand side. No menu is shown
- d) Frequency and amplitude values can be read out directly in all formats using the cursor



- Addition and Subtraction (in the frequency domain)
- Multiplication and Division (in the frequency domain)
- Time shifting (linear phase shift in the frequency domain)
- Changing polarity (180° phase shift)
- Calculating the reciprocal (in the frequency domain)
- Calculating the absolute value
- Calculating the square and square root of the amplitude in the frequency domain
- Calculating exponents
- Calculating natural logarithms
- Adding poles/zeros
- Editing values
- Converting data to a user-defined frequency format

## Display

### Screen Format

Measurement results can be displayed in various formats. Different graph formats are shown in Fig. 10. The Screen Format menu is used to set up the different formats: Graph A (and Graph B) display a single graph area for showing up to 36 curves simultaneously. Text can be superimposed on the graph field, or a full text page for user-defined text can be selected. Graph A & B gives a dual screen format to display Graph A (upper) and Graph B (lower) simultaneously.

Fig. 11 shows some of the screen formats which are also used for documentation. Graph Only is used to give an enlarged graph field which takes up the whole screen; no menu is shown. Full TSR, SSR or FFT Set-up gives a complete screen overview of the parameters for the respective menus, together with the parameters from the Level, Input and Output menus. Graph and TSR, SSR or FFT Setups give the parameters for the respective menus together with the Level menu and a graph field.

### Graph

The Graph menu is used for selecting the parameters for presenting measurement data in a system of coordinates. The desired function and the real coordinate to be displayed are selected in this menu. Selecting and calculating the frequency and time domain functions after the measurement has been done, allows measurement data to be displayed in a



Fig. 12 Input/output panel of the 2012, showing the 7-pin Preamplifier Input for connection of Brüel & Kjær condenser microphones, and the Direct Input which can be single ended or differential (balanced)

number of ways. The following functions and coordinates can be selected: Functions:

- Frequency Response
- $1/3$ -octave Response
- Time Response
- Response Decay
- Frequency Spectrum
- $1/3$ -octave Spectrum
- Time Signal
- Signal Decay
- Auto Correlation (only for spectra)

Coordinates:

- Real Part
- Imaginary Part
- Magnitude
- Phase
- Group Delay
- Instantaneous Frequency

### Cursor

The cursor is used for reading out the exact x- and y-coordinates of a point on a curve. The cursor x- and y-values can be transferred to a parameter field by using the "Cursor Value" key.

## Input/Output

### Analogue Inputs

The 2012 has a direct input for voltage signals and a standard B&K preamplifier input. Both inputs have a dynamic range of more than 80dB and an input signal range from 0.2 $\mu$ V to 100V peak. A range of high-pass filters can be selected for both inputs. Autoranging can also be selected for both inputs. The input/output panel on Type 2012 can be seen in Fig. 12.

#### Microphone/Preamp. Input

The 7-pin B&K Preamplifier Input socket supplies power for the microphone preamplifier, and has a 200V polarization voltage which can be switched off for use with prepolarized condenser microphones.

#### Direct Input

Voltage signals are connected via a BNT socket which also accepts BNC cables. The input can be single ended or differential (balanced) which gives a common mode rejection ratio of >70dB at 50/60Hz, enabling the high

sensitivity of the preamplifier to be used even in the presence of common mode noise signals at the input.

### Analogue to Digital Conversion

The anti-aliasing filter used in Type 2012 is a nine-pole elliptical, low-pass filter, which provides more than 80dB attenuation of input frequencies which can cause aliasing. The filter can be bypassed in FFT mode. 14-bit analogue to digital conversion provides a dynamic range of >80dB.

### Trigger Functions

The 2012 has a flexible trigger function for use in FFT mode. Delays, from -4 to 32 seconds can be selected, depending on the frequency range. The options available for starting a measurement are:

**Free Run:** Averaging begins as soon as the "Start" button is activated.

**External Trigger:** Averaging is initiated by an external trigger signal, with selectable time delay. The trigger input is via a BNC socket on the front panel.

**Internal:** Averaging starts when the input signal passes a certain level. The trigger slope can be positive or negative, and the trigger level can be set from -100% to +100% of the selected input value.

**Generator:** Averaging begins when a generator signal with a positive slope crosses zero level.

### Signal Generators

Type 2012 is equipped with two separate sine generators. The outputs of the generators are either fed to two separate BNT connectors ( $f_1$  and  $f_2$ ) on the front panel (accepts BNC plugs), or are summed and fed to a single BNT connector ( $f_1 + f_2$ ).

The output can be set directly in terms of the desired working units, e.g. Pa, ms<sup>2</sup>, once it has been calibrated. Separate calibration values for "separate" and "common" output modes can be stored. An automatic calibration can be performed with an externally measured output signal.

The frequency and level of the generators can be controlled directly with a Manual Generator feature.





*Fig. 13 Type 2012 is ideal for transducer measurements. The setup in the picture uses the Laser Transducer Set Type 3544 for measuring the Thiele-Small parameters. Use of the laser enables measurements without the mass-loading effects of an accelerometer*

The output and input levels are displayed graphically on the screen.

It is also possible to apply a weighting to the generator output. This feature can be used for example, to keep the sound pressure level from a loudspeaker constant over a specified frequency range. This is achieved by specifying the inverse response of the loudspeaker as weighting for the generator output.

#### Remote

An 8-pin socket accepting a standard DIN plug is fitted on the back panel for remote control. The following functions can be controlled via the remote control socket: Start, Stop, Proceed and Continuous. One pin is used to indicate a "Busy" state.

## General

#### Disk Drive

A 3 $\frac{1}{2}$ " high-density floppy disk drive is built into the 2012 for permanent storage of parameter setups, sets of measurement data, Auto Sequences,

screen pictures with curves, and user-defined text. The disk drive can handle 720Kbyte and 1.44Mbyte disks, and is PC/MS-DOS compatible.

The Disk Input/Output menu can be used to display a list of files on the screen, and to perform the following functions:

- Store
- Recall
- >Delete
- Protect
- Unprotect
- Rename
- Copy
- Format

#### Screen Copy

A copy of the present screen picture is obtained by pressing the Screen Copy key on the front panel. A hard copy file can be output to the IEEE-488 bus, the RS-232 bus or can be stored on a floppy disk. The 2012 is supplied with a number of setups for commonly used multi-colour pen-plotters, matrix printers, ink-jet printers and laser printers. If a non-standard printer or plotter is used, there is provision for setting up all

printer or plotter parameters in the Interface menu.

#### Analogue/Digital Self-test

A comprehensive analogue/digital self-test can be performed to ensure proper operation of the analyzer. During the self-test the 2012 checks its analogue and digital functions. Should a failure occur, a comprehensive error code system can be used to pinpoint the fault. This minimizes downtime.

## Interfaces

#### IEC/IEEE-488 Interface

The IEC/IEEE interface conforms to IEEE-488.1 and IEC 625-1 standards. All functions on the display, except those concerning IEEE controller functions, can be transmitted to and from Type 2012. This includes setup, measurement data, display data, Auto Sequences and a hard copy output. Type 2012 can also be used as a system controller via the IEEE-488 interface.

#### RS-232-C Interface

The RS-232-C interface conforms to EIA Standard RS-232-C (equivalent to CCITT V24). This interface is standard on a number of printers and plotters and is fairly simple to set up. To make a hard copy, the Interface menu for the printer or plotter must be set up for RS-232. Baud rates between 300 and 19200 can be selected.

#### Keyboard

A standard "QWERTY" type keyboard is supplied with Type 2012 for entering text on graphs and for entering file names. Extra keys are supplied with the keyboard so it can be easily changed to include German or French characters.

Loading the desired language for the help pages automatically changes the interpretation of the characters. The keyboard is connected to the front panel via a DIN-connector.

#### Monitor

Measurement results are presented on a 12" high-resolution colour screen. The frame frequency can be set to either 50 or 60Hz to avoid interference with other mains operated equipment. An external RGB monitor can be connected via a D-range socket on the rear panel.



## Applications

### Loudspeaker Measurements

Fig. 14 shows a simple setup for making loudspeaker measurements with Type 2012. Using the TSR technique, free-field measurements can be performed without an anechoic chamber. Analysis of cabinet diffraction can be made in the frequency and time domains. Changes in cabinet design can easily be assessed by displaying the two curves simultaneously in different colours, or by subtracting the curves and displaying the difference. For R & D work, the 2012 can be used for measuring the magnitude and phase of a loudspeaker's electrical impedance over its entire frequency range. For quality testing, the impedance can be measured at a single frequency.

The SSR technique in the 2012 has extensive facilities for making swept Harmonic, Intermodulation and Difference Frequency distortion measurements. These measurements can also be performed at different excitation levels. Defects, such as a rubbing voice coil, can easily be detected using the FFT Spectrum.

### Telephone Testing

When used with the Telephone Interface Type 5906/WH2517, Type 2012 forms a powerful telephone test system. The system illustrated in Fig. 15 can be used for measuring transmission characteristics of telephones, including free-field response of loudspeaking telephones. Measurements of Receive, Send and Sidetone response as well as Return Loss, Noise and distortion can be measured. The FFT Spectrum mode can be used for measuring the ringer tone, DTMF (Dual Tone Multi Frequency) and for analyzing the switching characteristics of hands-free telephones.

### Microphones

The output weighting facility of the 2012 can be used to obtain a sound source with a flat frequency response for testing microphones. Type 2012 can be used for free-field (reciprocity) calibration of microphones. The separate generator outputs ( $f_1 + f_2$ ) enable measurements of Intermodulation and Difference Frequency distortion. Variations in the directional characteristics can be displayed for up to 36 different angles simultaneously.

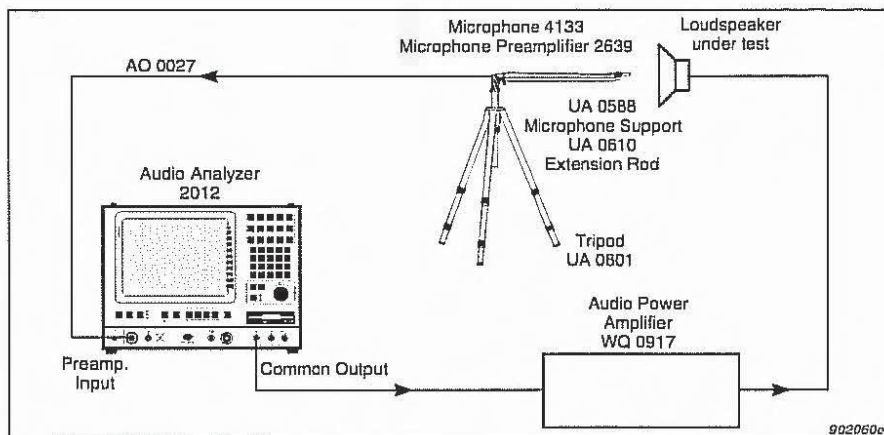


Fig. 14 System setup for performing loudspeaker measurements with Type 2012

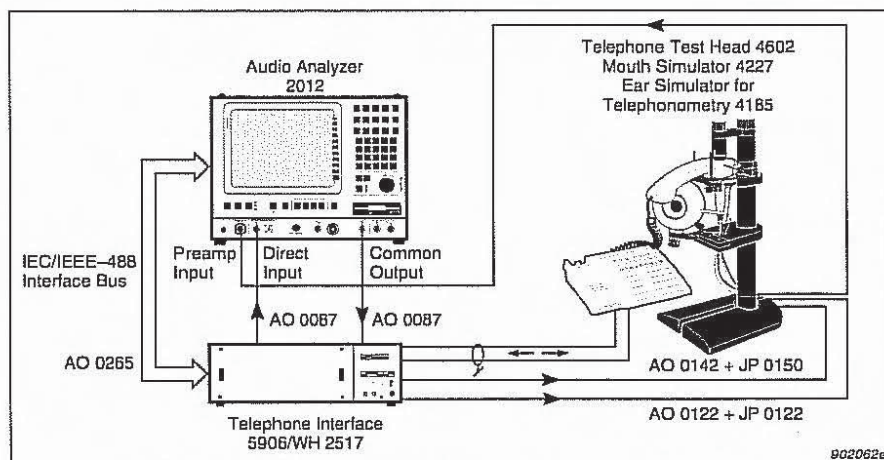


Fig. 15 System setup for performing telephone measurements with Type 2012

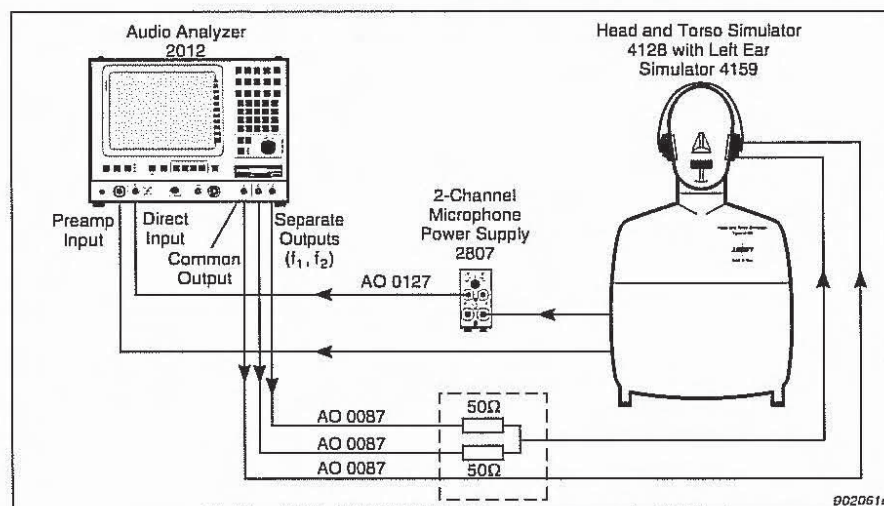


Fig. 16 Head and Torso Simulator Type 4128 can be used with Type 2012 for headphone measurements. Using 50W resistors, the two single outputs ( $f_1$  and  $f_2$ ) are summed, thereby enabling left- and right-channel measurements to be performed directly

### Headphone and Hearing Aid Testing

Using Head and Torso Simulator Type 4128 together with Type 2012 enables objective in-situ measurements of headphones, communication headsets and hearing aids. The setup in Fig. 16 can be used for automatic left- and right-channel frequency

measurements of headphones. Type 2012 can also be used for free-field Insertion Gain measurements on hearing aids, i.e., measuring the difference between the frequency measured in the ear canal with a hearing aid fitted, and the open ear frequency response.



# Specifications 2012

## Input Characteristics:

### DIRECT INPUT:

Via BNT socket, single ended or balanced input (accepts BNC cables)

Input Impedance: 1M $\Omega$ ||100pF

Coupling: AC

Common mode voltage: Max. 5V

Common mode rejection:

>70dB at 50/60Hz for 1V peak input range

>60dB at 50/60Hz for 1V peak input range

Input ranges: 33 ranges from 3mV to 100V peak in a 1, 1.5, 2, 3, 4, 6, 8 sequence

### PREAMP. INPUT:

Via standard B&K 7-pin socket

Input Impedance: 1M $\Omega$ ||100pF

Polarization voltage: 0 or 200V from 2M $\Omega$  source

Heater Voltage: +6V (at 200mA) from 30 $\Omega$  source and +12V (at 200mA) from <1 $\Omega$  source

Input ranges: 33 ranges from 3mV to 100V peak in a 1, 1.5, 2, 3, 4, 6, 8 sequence

### MAXIMUM INPUT VOLTAGE:

2012 is a safety class II instrument (IEC348). For safe operation in accordance with IEC348, the voltage of the signal ground relative to earth must not exceed 42VRMS (sine). To ensure safe operation in accordance with IEC348 at higher voltages, the user must limit all input currents to 0.7mA peak

Maximum input voltage:

100V RMS/150V peak

### HIGH-PASS FILTERS:

1Hz, -0.1dB. Slope 18dB/oct.

20Hz, -0.2dB. Slope 24dB/oct.

100Hz, -0.2dB. Slope 24dB/oct.

### ANTI-ALIASING FILTER:

Cut-off frequency: 40kHz. Provides at least 80dB attenuation of input frequencies which can cause aliasing. The filter can be bypassed in FFT mode

### INPUT SAMPLING:

Internal: 102.4kHz

A/D conversion: 14 bit

### CALIBRATION:

Units, dB reference and transducer sensitivity can be keyed into the Input menu. Automatic calibration with a known calibration source. The calibration values for the Direct and Preamp inputs are stored individually

### FREQUENCY RESPONSE:

1Hz to 40kHz,  $\pm 0.1$ dB re 1kHz (with 1Hz high-pass filter)

### AMPLITUDE LINEARITY:

$\pm 0.1$ dB or  $\pm 0.005\%$  of max. input, whichever is greater

### ATTENUATOR ACCURACY:

$\pm 0.1$ dB re full scale

### HARMONIC AND SPURIOUS DISTORTION PRODUCTS:

<-80dB re full scale for all attenuator settings

### INPUT AUTORANGE:

Selects optimum attenuator setting. Can be switched on or off

## Output Characteristics:

### SIGNAL GENERATOR TYPE:

Two sine generators

### SEPARATE OUTPUT:

Two BNT sockets on the front panel for the two separate output signals,  $f_1$  and  $f_2$  (accept BNC plugs)

### COMMON OUTPUT:

One BNT socket on the front panel for the sum of the two output signals,  $f_1 + f_2$  (accepts BNC plugs)

### OUTPUT:

Voltage:

$f_1$  and  $f_2$ : 100 $\mu$ V to 3.16VRMS in 0.1dB steps

$f_1 + f_2$ : 50 $\mu$ V to 1.58VRMS in 0.1dB steps

Attenuator accuracy:

$\pm 0.1$ dB re full scale

Frequency Response:

1Hz to 40kHz:  $\pm 0.1$ dB re 1kHz

Harmonic and spurious distortion products:

<-85dB at 3.16V and load >1k $\Omega$

Inherent noise:

<-95dB re 3.16V (1600Hz BW)

Impedance:  $f_1$ ,  $f_2$  and  $f_1 + f_2$ : 50 $\Omega$

### CALIBRATION:

Units, dB reference and transducer sensitivity can be defined in the Output menu. Automatic calibration with an externally measured output signal in selected unit. Calibration values for  $f_1$  and  $f_2$  in both "Separate" and "Common" modes are stored individually

## Measurement Modes:

Time Selective Response — TSR

Steady State Response — SSR

FFT Spectrum — FFT

Auto Sequence 1 to 5

## Time Selective Response:

### START AND STOP FREQUENCY:

Can be selected from 1Hz to 40kHz

Minimum frequency range: 40Hz

### HARMONIC:

Selectable from 1st to 20th harmonic

### TIME-WINDOW:

50/(N $\times$ F), 100/(N $\times$ F), 200/(N $\times$ F),

400/(N $\times$ F) and 800/(N $\times$ F)

N = harmonic, F = frequency range

### DELAY:

0.0s to 100.0s (max 5 decimals, rounded off to nearest 10 $\mu$ s value)

### SWEEP TIME:

0.5, 1, 2, 4, 8, 16, 32, 64, 128, 256, 512s

### AVERAGES:

1 to 4096

### PAUSE:

0.0s to 100.0s

### CONDITIONING TONE:

0.0s to 10.0s (max. 3 decimals, rounded off to nearest 10ms value)

## Steady State Response:

### SWEEP:

A sweep is set up by defining a start and a stop frequency and a number of steps which can be distributed on a logarithmic or linear scale or at user-defined values in the frequency range from 1Hz to 40kHz

Log:

$1/3$ ,  $1/6$ ,  $1/12$ ,  $1/24$ ,  $1/48$  and  $1/96$ -octave steps

Log ISO: Series R10, R20, R40 and R80

Lin:

1 to 1600 steps

User-defined:

From 1 to 50 frequencies

### DETECTOR:

Detector band:

0.1, 0.15, 0.2, 0.3, 0.4, 0.6, 0.8, 1.0, 1.5, 2, 3,

and 6dB. The value specifies the maximum acceptable standard deviation on the measurement

### Detector delay:

0ms, 10ms, 20ms, 50ms, 100ms, ... 10s. The value specifies the delay before the detector is activated for each excitation frequency

### Maximum detector time:

0ms, 100ms, 200ms, 400ms, 800ms, 1.6s, 3.2s, 6.25s, 12.5s, 25s, 50s, 100s, 200s, 400s, 800s and 1600s. The value specifies the maximum measuring time after the detector has been activated

### HARMONIC DISTORTION:

Simultaneous measurement of selected harmonics up to 20th. Total, Total Distortion and Total Harmonic Distortion can be automatically calculated from selected harmonics

### DIFFERENCE FREQUENCY DISTORTION:

Simultaneous measurement of selected Difference Frequency products up to 9th order. Total Distortion can be automatically calculated from selected products

### INTERMODULATION DISTORTION:

Simultaneous measurement of selected Inter-modulation products up to 9th order. Total Distortion can be automatically calculated from selected products

## FFT Spectrum:

### BASEBAND MODE

Freq.Range	Points	Samples	Time
1Hz-400Hz	1600	4096	4s
1Hz-400Hz	400	1024	1s
1Hz- 4kHz	1600	4096	400ms
1Hz- 4kHz	400	1024	100ms
1Hz-40kHz	1600	4096	40ms
1Hz-40kHz	400	1024	10ms

### ZOOM MODE

Bandwidth	Points	Samples	Time
1.56Hz	513	1024	327.7s
3.12Hz	513	1024	163.8s
6.25Hz	513	1024	81.9s
.	.	.	.
1600Hz	513	1024	320ms

### Centre frequency:

1Hz + B/2 to 40kHz - B/2

where B = bandwidth

### AVERAGING:

Complex or Power averaging from 1 to 4096 averages

### WEIGHTING:

Hanning, Flat Top or Rectangular by Power averaging

### GENERATOR:

Off, one-tone and two-tone

### CONDITIONING TONE:

(One-tone only)

Duration:

0.0s to 10.0s (max. 3 decimals, rounded off to nearest 10ms value)

Level:

-40dB to 40dB in 0.1dB steps, re measuring tone level

### TRIGGER:

Free Run, External, Internal or Generator



**Trigger level:**

Can be selected in the range -100% to 100% of the specified input level, by internal trigger

**Trigger delay:****BASEBAND MODE**

Freq.Range	Time	Delay
1Hz-400Hz	4s	-4s to 32s
1Hz-400Hz	1s	-1s to 32s
1Hz-4kHz	400ms	-400ms to 3.2s
1Hz-4kHz	100ms	-100ms to 3.2s
1Hz-40kHz	40ms	-40ms to 320ms
1Hz-40kHz	10ms	-10ms to 320ms

**ZOOM MODE**

Freq.Range	Time	Delay
1.56Hz	327.7s	-327.7s to 10485s
3.12Hz	163.8s	-163.8s to 5242s
6.25Hz	81.9s	-81.9s to 2621s
.	.	.
1600Hz	320ms	-320ms to 10.2s

**External Trigger input:**

BNC socket on front panel

**External Trigger levels:**

HC MOS compatible. Triggers at high levels from 3.5 to 5.0V and does not trigger at low levels from 0 to 1.5V

**Manual Generator:**

Each generator can be activated for direct manual control of output and input.

The generators' output frequencies and levels are controlled by the dial on the front panel. The output frequency and level as well as the input level are shown on the screen

**Auto Sequences:**

2012 can store 5 Auto Sequences, each up to 100 lines.

Auto Sequences can be edited in a special menu appearing as a list containing the corresponding IEEE-488 bus commands. A "learn mode" is used to make this list by simply pushing the desired key. When an Auto Sequence is started, the functions and parameter settings are executed in sequential order

**Block Arithmetic:**

Block Arithmetic functions are performed on a set of data in one of the 11 result memories (Buffer, "M1" to "M10"). The result of a Block Arithmetic operation is a new set of data in the result Buffer, which can be copied to "M1" to "M10" at the same time

**OPERATIONS:**

- Copying data between the 11 result memories
- Weighting data with a frequency window: Hanning, Rectangular and Rectangular with Hanning-taper
- Weighting data with a time window: Hanning, Rectangular and Rectangular with Hanning-taper
- Addition and Subtraction
- Multiplication and Division (in the frequency domain)
- Time shift (linear phase shift in the frequency domain) of a set of data
- Change Sign (180° phase shift)
- Reciprocal Value (in the frequency domain)
- Absolute Value

- Square and Square root of the amplitude in the frequency domain
- Exp
- Ln (in the frequency domain)
- Constant (sets a set of data to a constant k)
- Adding poles/zeros
- Editing values
- Converting a set of data to another frequency format

**Special Calculation:**

For future use

**Disk I/O:**

Built-in 3 1/2" high-density floppy disk drive (720 Kbyte or 1.44Mbyte formatted capacity). The data format is compatible with PC/MS-DOS. A list of files can be shown on the screen.

Data which can be read from or to the disk is: parameter setups, Auto Sequences, sets of measurement data, screen pictures with measurement curves and user-defined text, screen copy data for printer or plotter

**OPERATIONS:**

- Store
- Recall
- Delete
- Protect
- Unprotect
- Rename
- Copy
- Format

**Internal Memory:**

A static 3Mbyte RAM memory with battery back-up is used for storing:

- Program Source
- Parameter Setup
- 5 Auto Sequences
- 11 Measurement results (Buffer and "M1" to "M10")
- Dual Graph setup with up to 36 curves and two user-defined text buffers

When switching on or resetting the 2012 without the program disk, the program source, parameter setup, Auto Sequences, result memories and graph setups stored in the RAM are used. Switching on or resetting with the program disk in the disk drive reads the program source from the disk and reset all data to factory defaults

**Display:****Type:**

Built-in 12" CRT colour screen, 16 colours can be selected from a palette of 4096

**Resolution:**

640x480 points

**Frame frequency:**

50Hz or 60Hz

**Line frequency:**

31500Hz

**Contrast:**

Can be adjusted at the front panel

**RGB monitor:**

9-pin D-range female connector on the rear panel with RGB and sync signals

**Graph:**

The Graph menu on the screen is used to set up one or more (up to 36) curves in user-defined colours, based on the data from one of the 11 result memories. Curve colours, graph scaling,

smoothing, grid setting and x- and y-axis parameters are also set up in this menu

**Functions implemented:**

- Frequency Response
- 1/3-octave Response
- Time Response
- Response Decay
- Frequency Spectrum
- 1/3-octave Spectrum
- Time Signal
- Signal Decay
- Auto Correlation (only for spectra)

**Coordinate:**

Is used to select the real coordinate to be displayed from the complex function (if possible)

- Real Part
- Imaginary Part
- Magnitude
- Phase
- Group Delay
- Instantaneous Frequency

**SCALING FOR SPECTRA:**

Amplitude, RMS, power, ASD (amplitude spectral density), PSD (power spectral density) or ESD (energy spectral density)

**Screen Format:**

The default screen format has a graph area on the left-hand side of the screen and a menu on the right-hand side

The following screen formats can be set up in the Screen Format menu:

**Graph A:**

**Curve Only:** gives a single graph area for displaying up to 36 curves in user-defined colours  
**Text Only:** shows a full text page for keying in user-defined text

**Curve & Text:** for superimposed display of curves and text

**Graph B:**

As Graph A

**Graph A & B:**

Is used to display a dual screen format. The upper graph area shows the Graph A picture, the lower one Graph B.

**Graph Only:**

The Graph area (A, B or A & B) takes up the whole screen. No menu is shown

**Full TSR/SSR/FFT Setup:**

Parameters from Time Selective Response-, Steady State Response- or FFT Spectrum-menus respectively, as well as parameters from Level-, Input- and Output menus, are displayed in tables which take up the whole screen. No menu is shown

**Graph and TSR/SSR/FFT Setup:**

Parameters from Time Selective Response-, Steady State Response- or FFT Spectrum-menus respectively, as well as parameters from Level menus are displayed on the left-hand side of the screen. The graph area is shifted to the right. No menu is shown

**IEEE/IEC Interface:**

Conforms to IEEE-488.1 and IEC 625-1 standards. Any function shown on the display, except functions concerning IEEE-488 controller functions, can be transmitted to and from Type 2012. This includes parameter setup, result data, display data and Auto Sequences (in ASCII or binary format)



**FUNCTIONS IMPLEMENTED:**

Source Handshake	SH1
Acceptor Handshake	AH1
Talker	T6
Listener	L4
Service Request	SR1
Remote/Local	RL1
Parallel Poll	PP1
Device Clear	DC1
Device Trigger	DT1
Controller	C1, 2, 3, 4, 12

**COMMAND SET:**

Standard engineering English reflecting the front panel and screen names. Compound headers for read/write setup functions (refer to IEEE-488.2)

**CODE:**

ASCII (ISO 7-bit) code or binary

**INTERFACE TERMINATOR:**

Can be specified in the Interface IEEE menu or from a controller

**DEVICE ADDRESS:**

Addresses from 0 to 30 can be specified in the Interface IEEE menu

**CONTROLLER FUNCTIONS:**

Hard copies are output to the IEEE-488 bus only when Type 2012 is set up as system controller or is the controller-in-charge.

When 2012 is used as system controller it is possible to output interface messages:

- Universal Commands (DCL and LLO)
- Addressed Commands (SDC, GET and GTL)
- Listen Address and UNL
- Device Dependent Messages in ASCII code and to conduct a Serial Poll

**RS-232-C Interface:**

Screen Copy output only.

Conforms with the EIA Standard RS-232-C (equivalent to CCITT V24).

Coupled as a "Data Terminal Equipment" (DTE)

Connector: 25-pin D-range male

Mode of operation: Full duplex

Number of data bits: 7, 8

Number of stop bits: 1, 2

Baud rates: 300, 600, 1200, 2400, 4800, 9600, 19200

Parity: None, Even, Odd

Synchronization method: X-on/X-off, Hardwired, Off

**Power Supply:**

Voltage: 100V, 115V, 127V, 200V, 220V and 240V AC  $\pm 10\%$

Frequency: 50Hz–60Hz  $\pm 5\%$

Power rating: approx. 150VA

Complies with Safety Class II of IEC 348

**Environmental:**

Operating temperature: 5°C to 40°C (41°F to 104°F)

Storage temperature: –25°C to +70°C (–13°F to +158°F)

Humidity: 0 to 90% RH (5°C to 40°C), non-condensing at 40°C

EMI: Complies with U.S. FCC requirements for Class B computing devices

**General:**

**Safety:** Complies with IEC 348 Safety Class II  
**Cabinet:** Supplied as model A (metal cabinet) or C (as model A but with flanges for standard 19" racks)

**Dimensions:**

Height: 310.4mm (12.2in)

Width: 430mm (16.9in)

Depth: 400mm (15.7in)

Weight: 32.5kg (71.6lb)

**HELP PAGES:**

Help pages are provided for all buttons, and can be selected in English, German or French

**KEYBOARD:**

A standard "QWERTY" keyboard with exchangeable keys for German and French characters is delivered with the 2012. The 2012 is easily set up to German or French characters, at the same time changing the language of the help pages. The keyboard connects to the front panel

**SCREEN COPY:**

The Screen Copy function supports multi-colour pen-plotters (HPGL), matrix printers, ink-jet printers and laser printers can be connected to the IEEE-488 and RS-232-C outputs. By pushing the **Screen Copy** button a copy of the present screen picture is printed or plotted. Printer drivers for a number of popular printers are included in the Instrument menu

**REMOTE CONTROL:**

8-pin DIN socket on the rear panel for controlling Start, Stop, Proceed or Continuous. One pin is used to indicate "Busy" state and an extra pin is reserved for future use

## Ordering Information

**Type 2012A: Audio Analyzer**

Includes the following Accessories:

AN0020:	Mains Cable
BA1000:	Blinder containing English Manuals Vol. 1, 2, 3, Main Program Disk and Familiarization Guide Disk
or BA1001:	German version
or BA1002:	French version
NP0028:	External Keyboard
SN0187:	Set of keys with French characters
SN0188:	Set of keys with German characters
2xAO0087:	2 BNC to BNC Coaxial Cables
JP0315:	BNT Triaxial Plug
UA0814:	IEEE-488 24-way bus connector kit
JJ2500:	25-pin D-range female connector
DH0158:	Housing for JJ2500
JP0802:	8-pin DIN plug (male)
JP0914:	9-pin D-range male connector
DH0862:	Housing for JP0914
2xVF0007:	2 Spare Fuses F1.6A/250V
3xVF0019:	3 Spare Fuses F3.15A/250V

**Type 2012C:** A Type 2012A but with flanges for standard 19" racks

**Optional Accessories****LOUDSPEAKER TESTING:**

Type 2639S: Microphone Preamplifier

Type 4133:  $\frac{1}{2}$ " Condenser Microphone

WQ0917: Audio Power Amplifier

AO0027: B&K Microphone Extension Cable (3m)

UA0801: Tripod

UA0588:  $\frac{1}{2}$ " Microphone Support

UA0610: Extension Rod

**TELEPHONE TESTING:**

Type 5906/ Telephone Interface (includes

WH2517: IEEE-488 Interface Cable

AO0265)

Type 4227: Mouth Simulator

Type 4905: Telephone Test Head

JP0150: Adaptor (BNC to Banana plugs)

AO0142: BNC to BNC Cable (3m)

Type 4185: Ear Simulator for Telephonometry (including  $\frac{1}{2}$ " microphone and preamplifier and built-in sound source for seal check)

**HEADPHONE AND HEARING AID TESTING:**

Type 4128: Head and Torso Simulator

Type 4159: Left Ear Simulator

Type 2807: 2-Channel Microphone Power Supply

AO0127: B&K to BNC Coaxial Cable

AO0087: BNC Cable

**GRAPHICS PLOTTER:**

Type 2319: Graphics Plotter

AO0265: IEEE-488 Interface Cable

**Miscellaneous:**

KS0027: Set of Rack Mounting Flanges

QR1102: Package of 10  $3\frac{1}{2}$ " dual-sided

double-density floppy disks

QR1105: Package of 10  $3\frac{1}{2}$ " high-density floppy disks

**Interface Cables:**

AO0194: Interface Cable (2m), IEC 625-1 (25-way)

AO0264: Interface Cable (2m), IEC 625-1 (25-way) to IEEE-488

AO0265: Interface Cable (2m), IEEE-488

AO0195: Adaptor to convert IEEE-488 connector to IEC 625-1 (25-way)